
GML400RV Multipoint Entry

Jan 2025

NEW VERSION 2025

FEATURES:
NO HANDING REQUIRED
(FIELD REVERSABLE)
INSULATING FOAM INCLUDED.

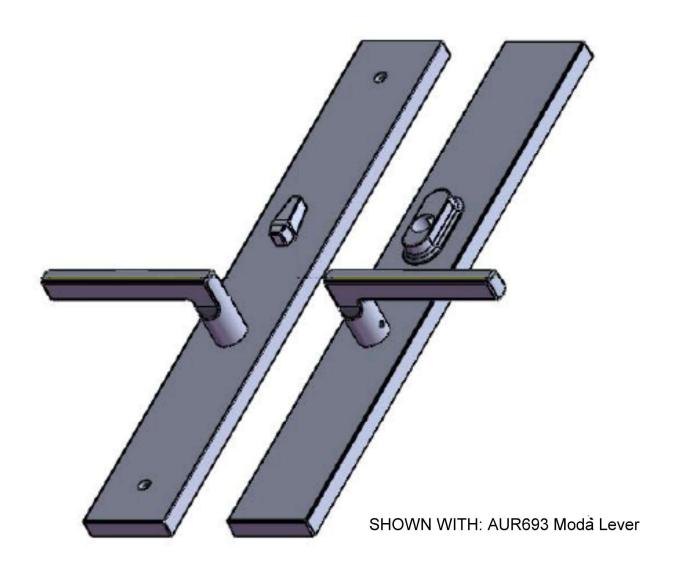




GML400RV Multipoint Entry

Jan 2025


INSTALLATION INSTRUCTION

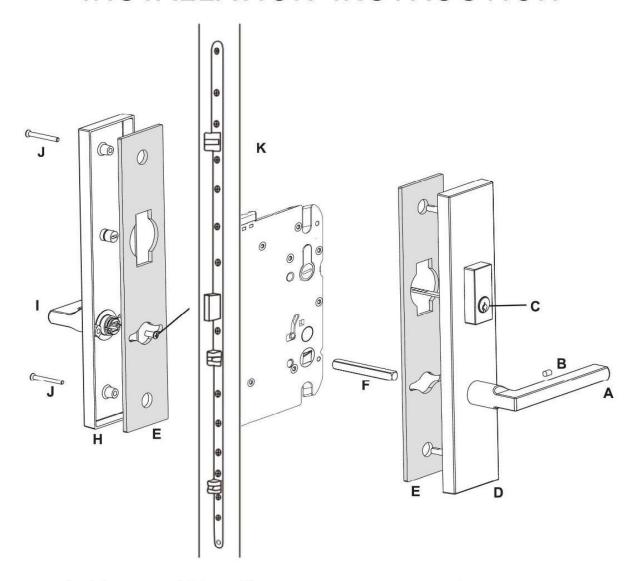

- A. External Handle
- C. Lock Cylinder
- E. Insulating Foam
- G. Fixing Screw
- I. Interior Handle
- K. Lock Body (Supplied by Others)

- B. Hex Screw
- D. External Trim
- F. Spindle 8mm x 8mm
- H. Interior Trim
- J. Plate Screw

Adjusting to Left or Right-Hand Opening

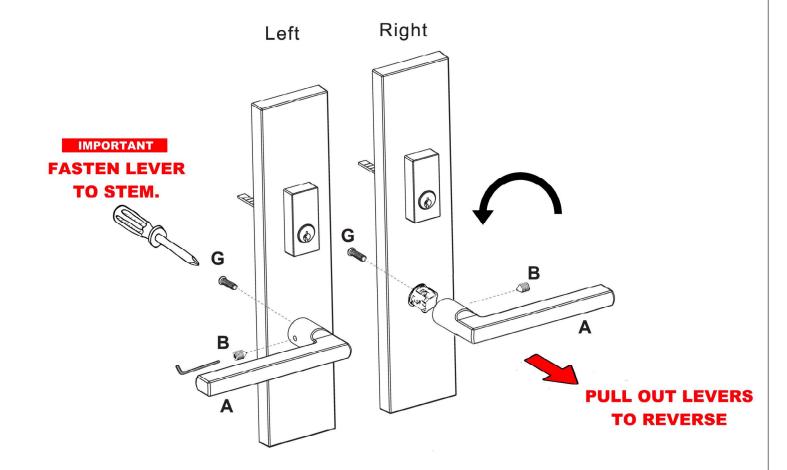

- 1. Loosen the small hex screw(B) at the top of the lever and carefully remove the lever from its position.
- 2. Rotate the handle(A and I) to the desired direction (left or right).
- 3. Use the fixing screw (G) from the accessory pack:
- Insert the fixing screw into the interior of the lever head.
- Tighten it securely to hold the handle in place.
- 4. Retighten the small hex screw(B) to ensure it is securely fixed.

Note:

For handles that are not symmetrical after a 180° rotation:

- Swap the positions of the front lever and rear lever to achieve the correct orientation.
- · Repeat the steps above to complete the adjustment.

Jan 2025

DIMENSIONS (mm)

