


INSTALLATION INSTRUCTIONS

Lever on Narrow Plate

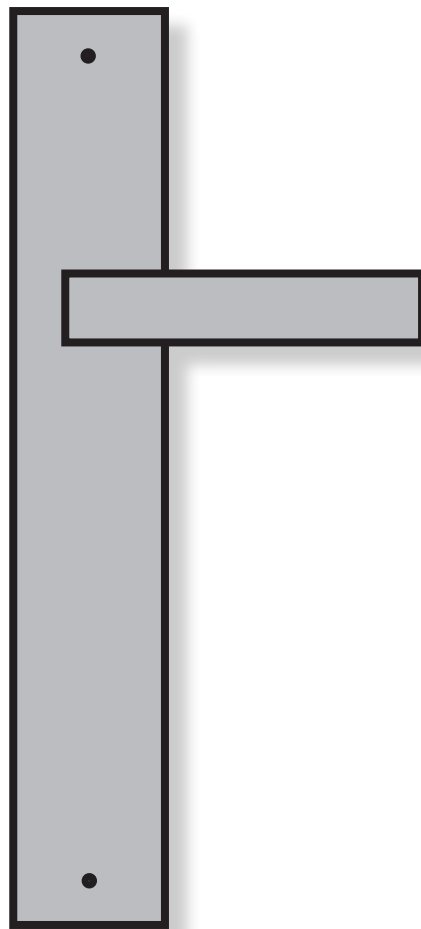

Tubular Latch



ALL FUNCTIONS

Installation Instructions Function 05 Passage / Function 15 Privacy non-bored conditions


NOTE: TEMPLATE MAY NOT BE TRUE-TO-SIZE. Please use for reference purposes only.
DO NOT DRILL until measurements are verified.

Passage Function 05 2 3/8" or 2 3/4" Backset


Privacy Function 15 2 3/8" or 2 3/4" Backset

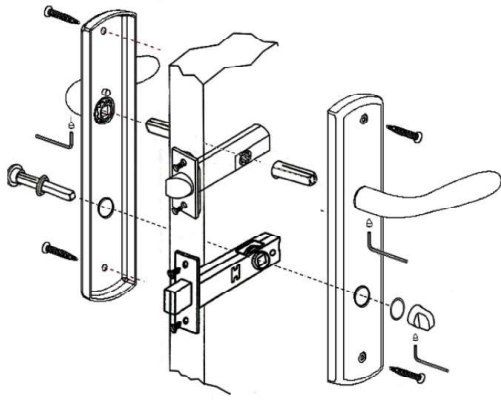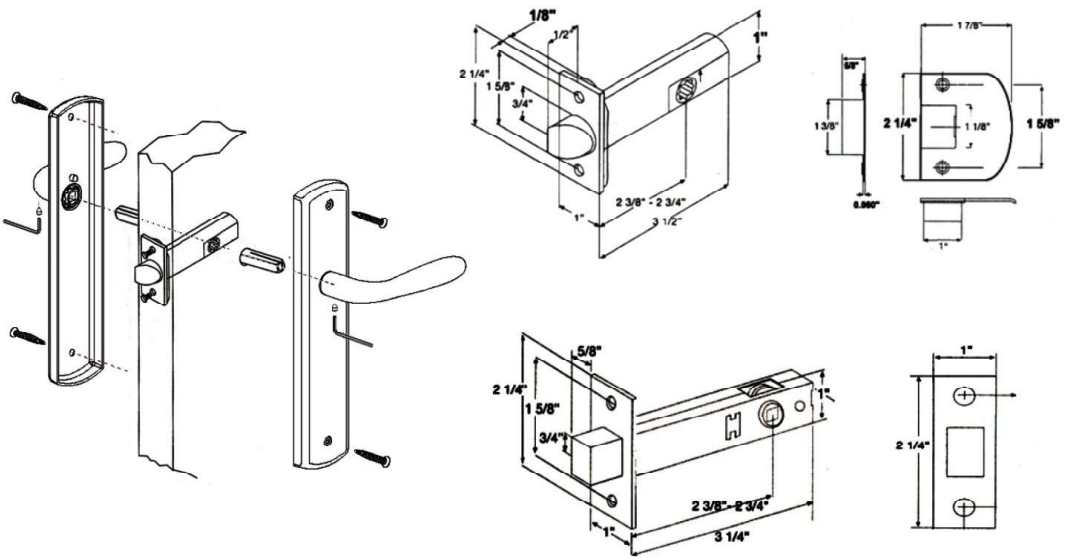

TEMPLATE PASSAGE Function 05

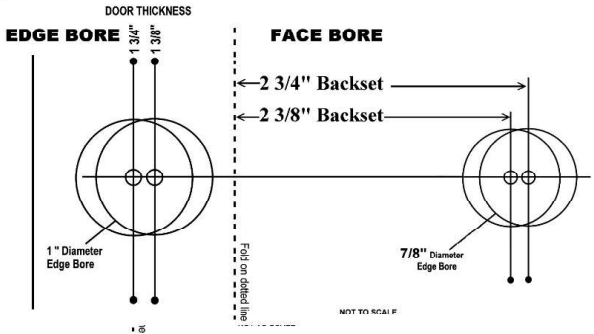

TEMPLATE PRIVACY Function 15

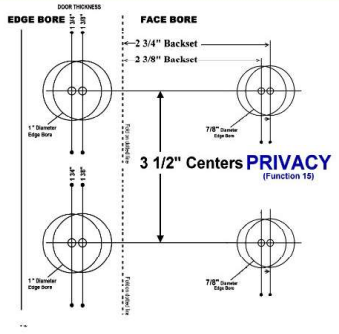


Installation Instructions Function 30 Single (Half) Dummy

Feb 2022

BE SURE TO READ ALL INSTRUCTIONS BEFORE PREPARING DOOR.

Determine Backset

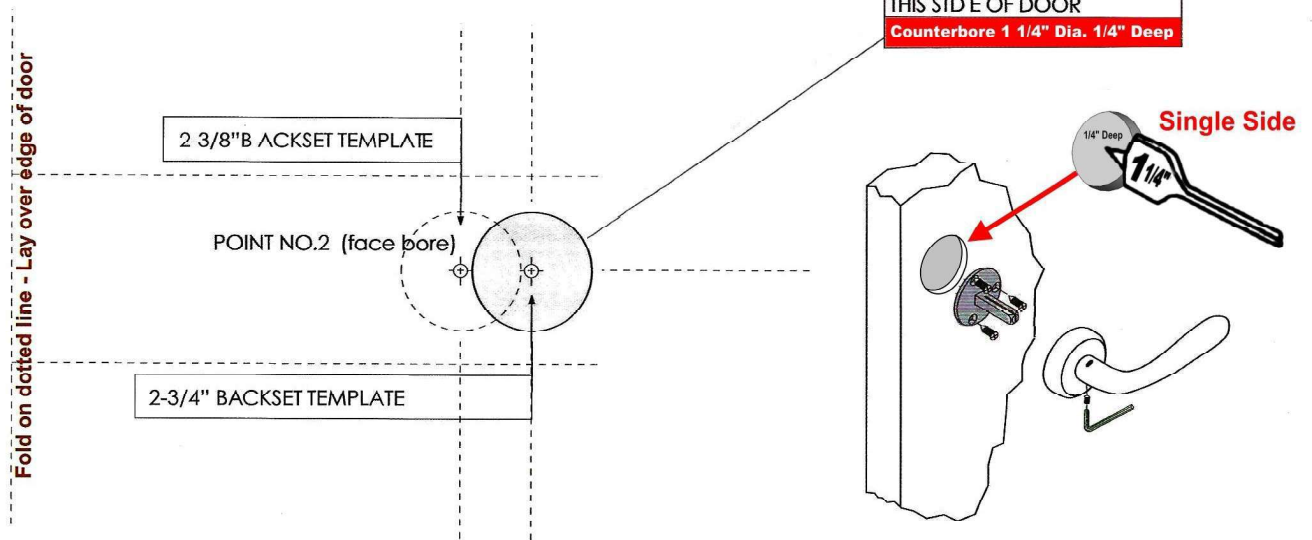


Installation Instructions Function 32 Double (Full) Dummy

Feb 2022

BE SURE TO READ ALL INSTRUCTIONS BEFORE PREPARING DOOR.

Determine Backset

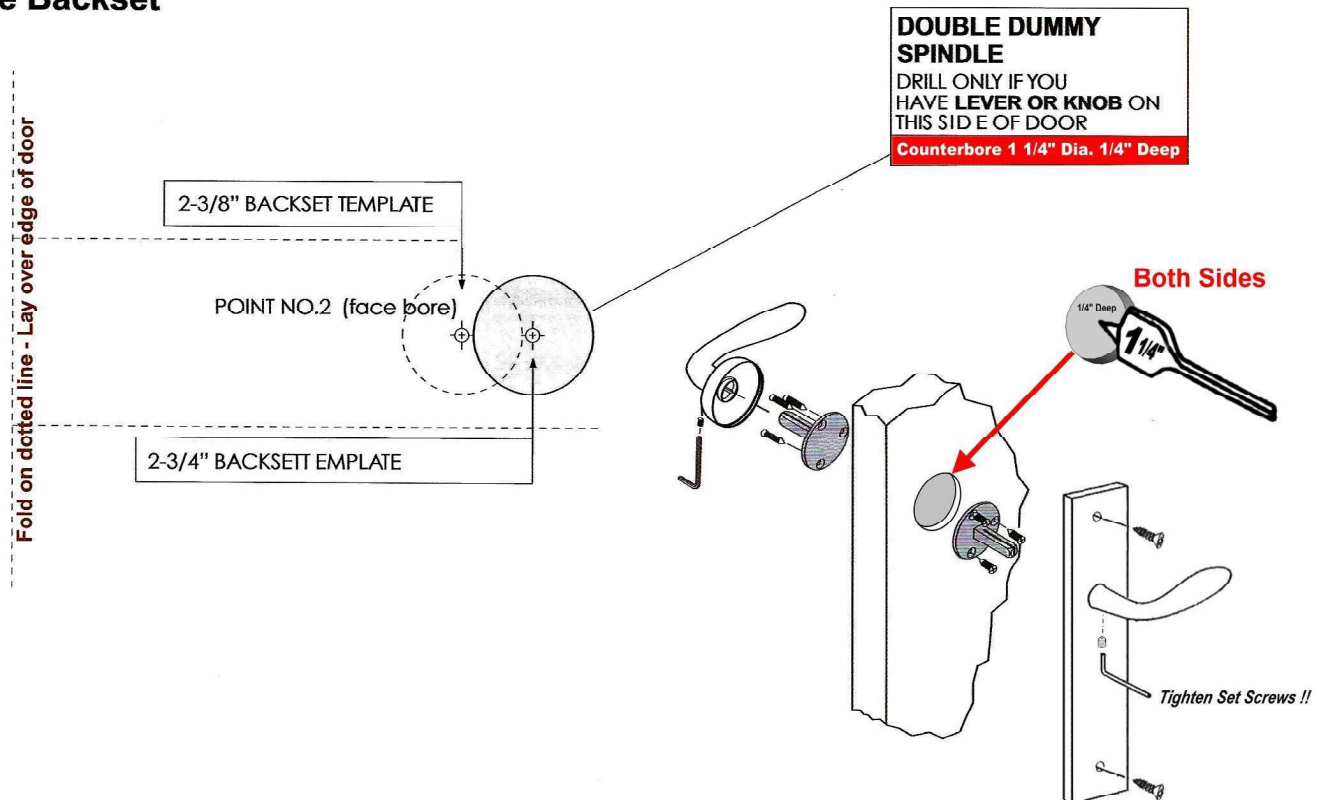


Installation Instructions Function 47 Tubular Keylock non-bored conditions


Feb 2022

BE SURE TO READ ALL INSTRUCTIONS BEFORE PREPARING DOOR.


Passage Latch & Strike

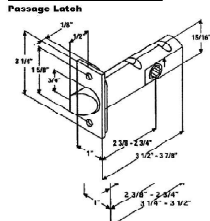



Passage Strike

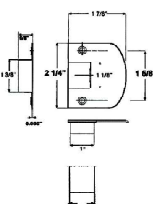

Dead Bolt & Strike

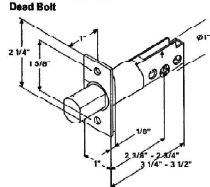


Dead Bolt Strike

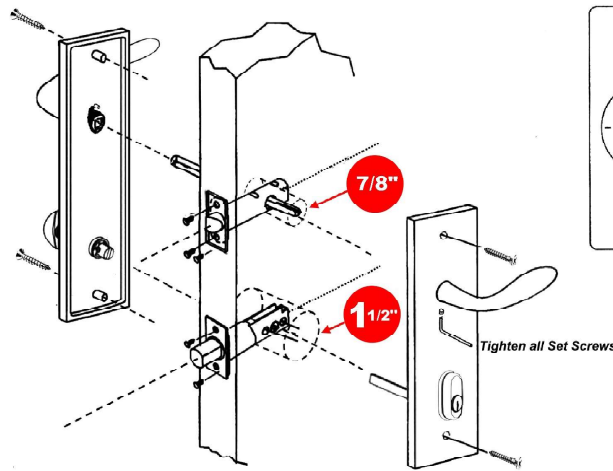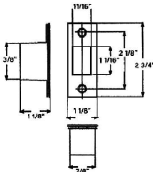

FACE PLATE

POINT NO. 3 (Screw mounting points)

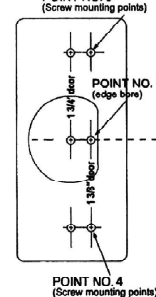

POINT NO. 4 (Screw mounting points)

Latch and Bolt Guide

2 3/8" Backset

Drill 1 1/2" or 2 1/8" Dia. Hole Through Door

2 3/4" Backset


Drill 1 1/2" or 2 1/8" Dia. Hole Through Door

3 1/2" Center to Center

Fold on dotted line. Lay over edge of door


ATTENTION !!!
Not to Scale
Verify all Sizes on Site

Position Template




Determine latch backset (2-3/8" or 2-3/4"). Fold enclosed template on dotted line and locate on door at desired height (diagram A). If door is bevelled (see diagram B), place folded edge on low side of bevel as shown above.

Mark Door

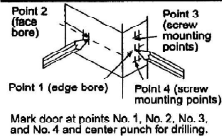

Mark door at points No. 1, No. 2, No. 3, and No. 4 and center punch for drilling.


Drill Edge Bore

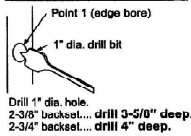


Drill Face Bore




Position Faceplate

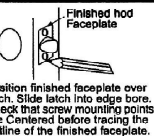


Chisel Mortise




Insert Latch



Attach Faceplate

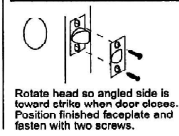


Install Strike

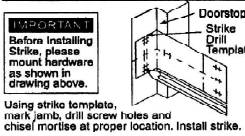

FACE PLATE

POINT NO. 3 (Screw mounting points)

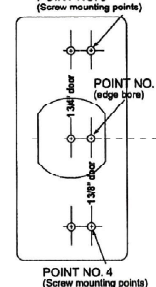

POINT NO. 4 (Screw mounting points)

IMPORTANT:
READ ALL INSTRUCTIONS CAREFULLY
BEFORE PREPARING DOOR

2 3/8" Backset

Drill 1 1/2" or 2 1/8" Dia. Hole Through Door

2 3/4" Backset

Drill 1 1/2" or 2 1/8" Dia. Hole Through Door

NOTE: Check to ensure face plate does not restrict free movement of the latch head. Repeat instruction 1 - 9 for latch bolt. Install trim.