



# AURUM DESIGN



**Stock Finishes:**

- US15 - Satin Nickel
- US19 - Flat Black
- US4 - Satin Brass
- US14 - Polished Nickel

<b>Model</b>	<b>MR6180KEY</b> MODA Pocket Door Mortise	Height-Plate 7 1/2"	Width-Plate 2 3/8"	Backset: 2 1/2"


EXCLUSIVE DOOR HARDWARE

# INSTALLATION INSTRUCTIONS

SEPT. 2022

## MR6199PCY / MR6180KEY - MODA POCKET DOOR MORTISE SET


### 1 Install Lock Body

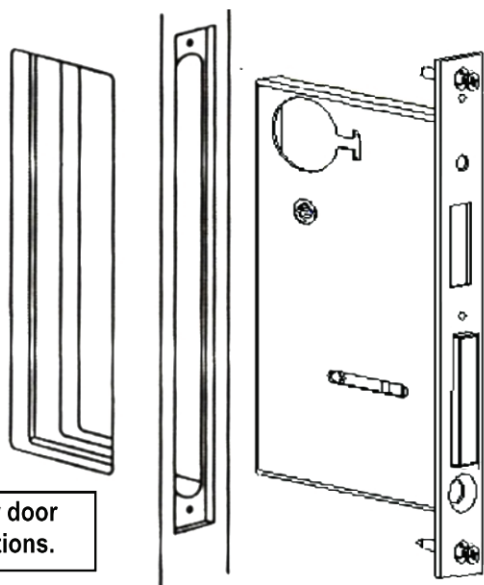

See template for door prep. specifications.

### 2 Tighten Driver Bar Cylinder


**KEYLOCK ONLY!**

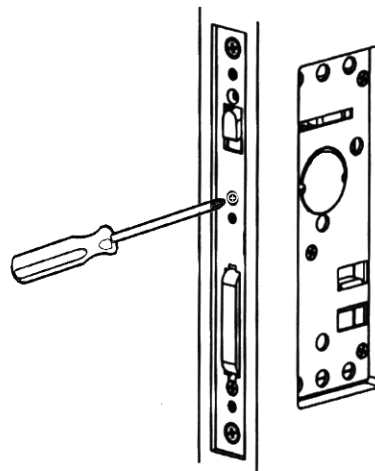

Tighten locking screw to engage notch on cylinder


### 3 Mount Inside/Outside Plates

**KEYLOCK ONLY!**

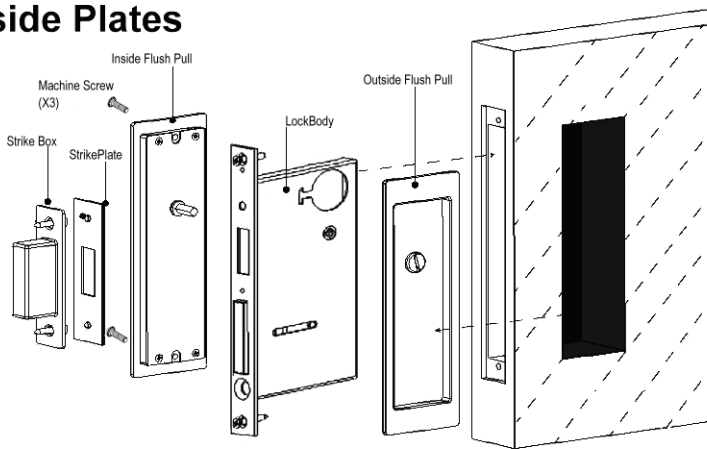

See template for door prep. specifications.


Outside Flush Pull

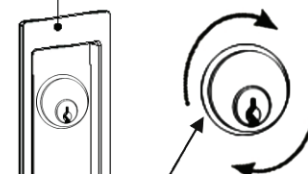


Note: Notch on cylinder must be in the 9 o'clock position when fully screwed into lock body.

Align Privacy Button with Thumb-Turn spindle and secure trim plates to door.

### 4 Install Faceplate Cover

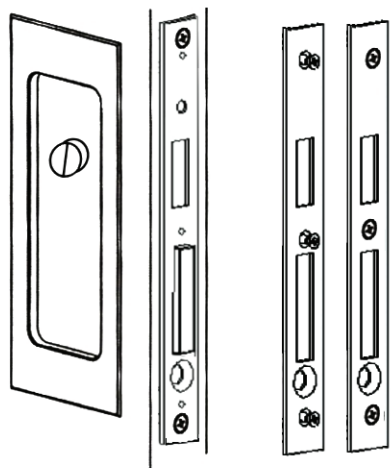


### 5 Install Door Jamb Strikeplate

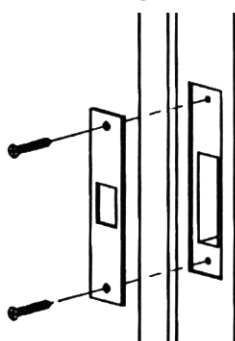

See template for door jamb prep. specifications.

### 6 Check Operation

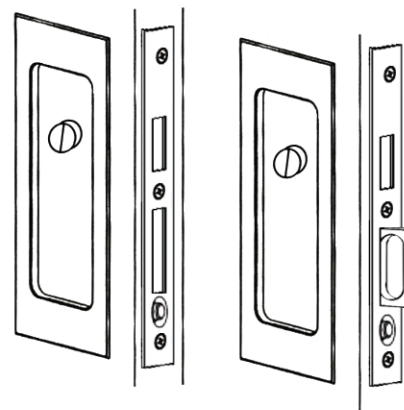

DEPRESS BUTTON TO OPEN.

# INSTALLATION TEMPLATE

SEPT. 2022.

MR6199PCY / MR6180KEY - MODA POCKET DOOR MORTISE SET


MR6100PGE - MODA POCKET DOOR MORTISE SET

Available for: 1 3/8" and 1 3/4" Doors

3 5/8" DEEP FOR MORTISE BOX

StrikePlate & DustBox

NO STRIKEPLATE for PASSAGE SET

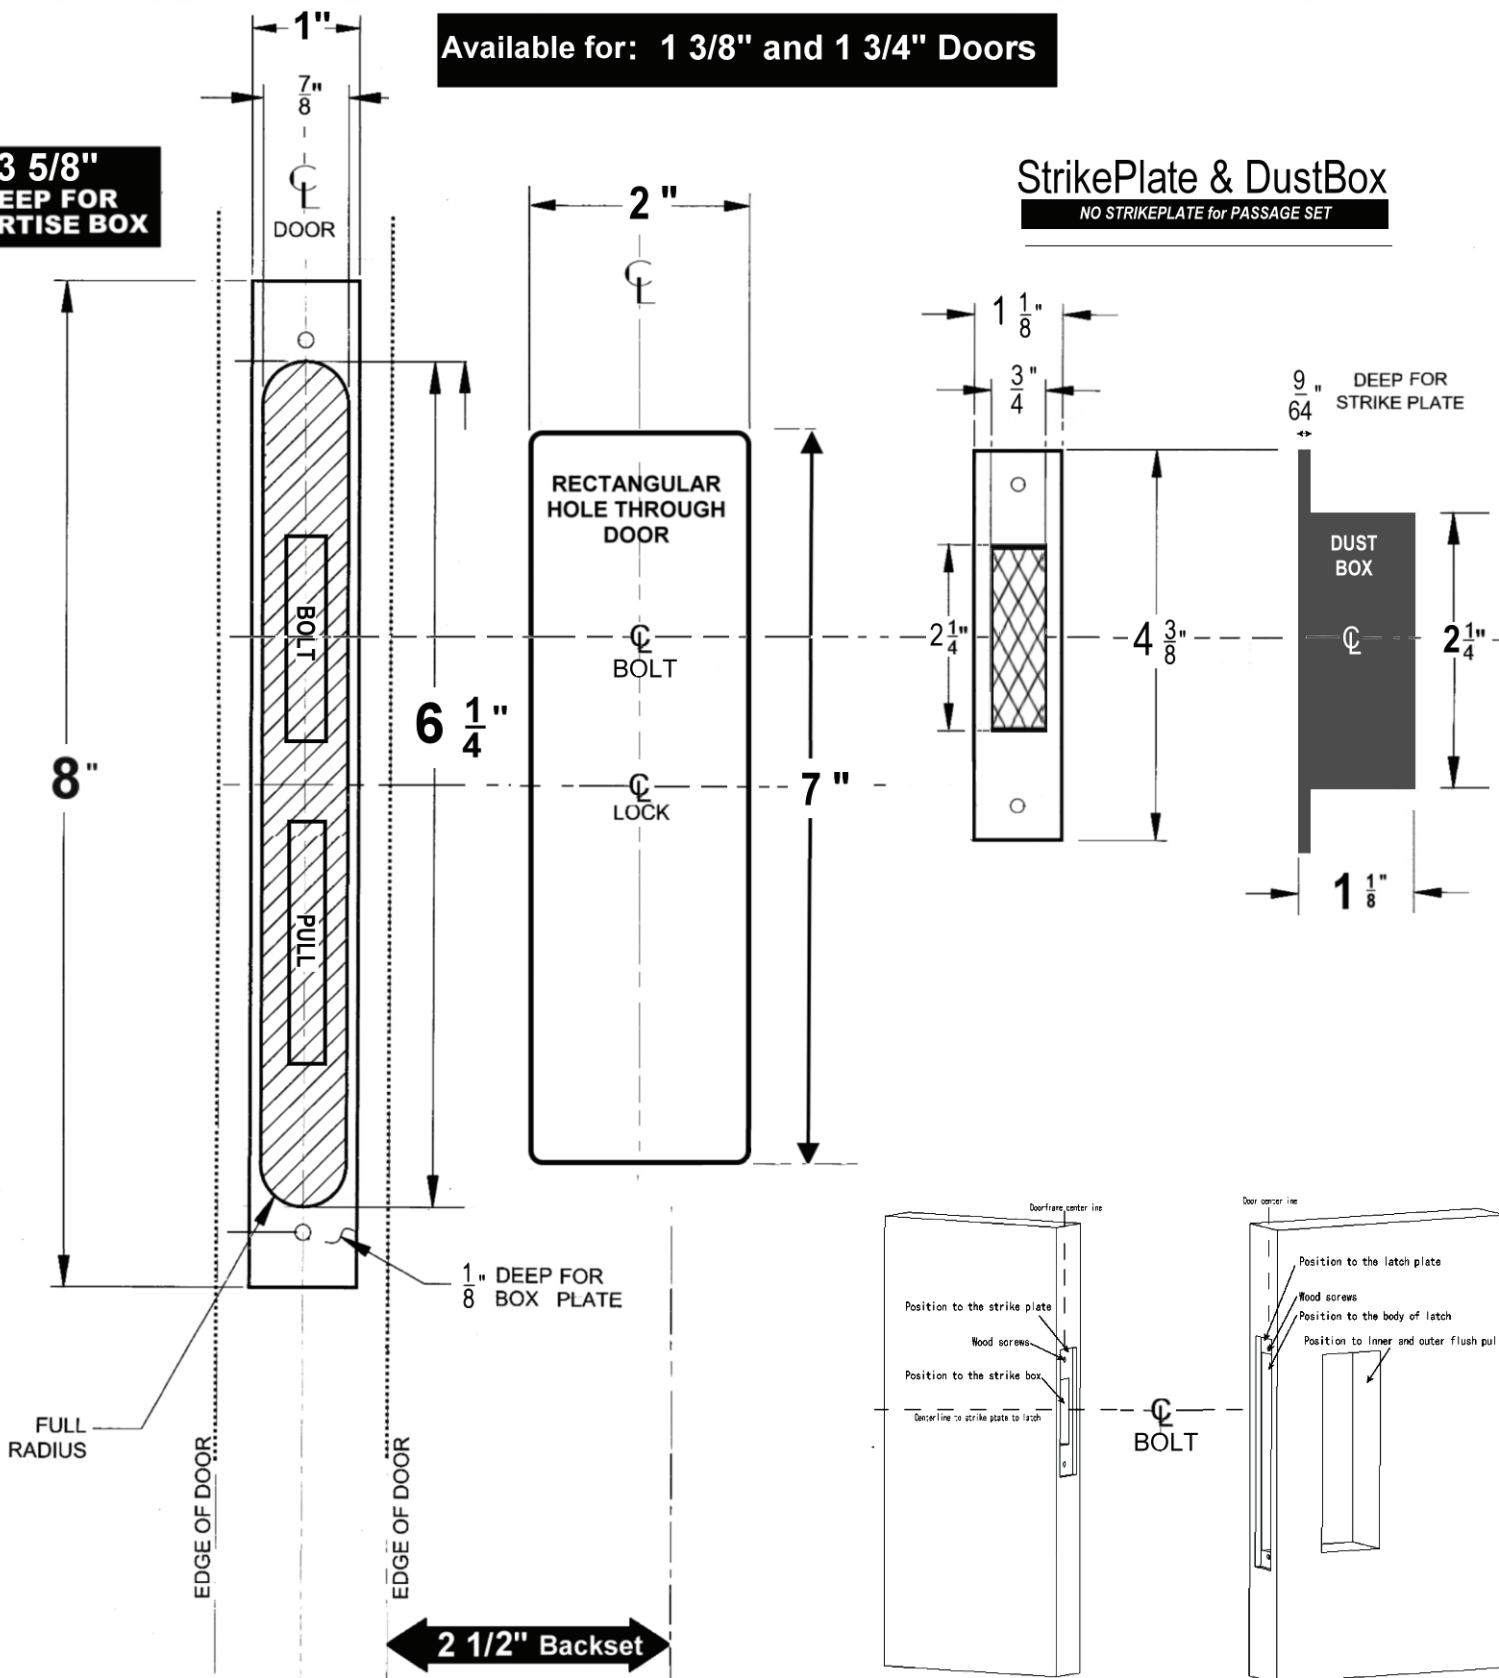

TEMPLATE NOT TO SCALE !